HOBOware Software BHW-PRO-DLD • BHW-PRO-USB



Designed to work with USB and optic-offloading data loggers, HOBOware® simplifies setup and enhances your data analysis with powerful tools for easy setup, graphing, and analysis of our stand-alone products. Download HOBOware for free, or upgrade to HOBOware Pro for even more advanced data analysis and logger management tools. You can purchase a HOBOware Pro license at any time. (Note: A USB-A to USB-B mini cable for external sensors is included when you purchase HOBOware Pro software).

Features:

- Simple menus for fast, easy logger setup and readout
- Point & click for fast setup and readout
- Scaling to real-world engineering units
- Presentation-quality graphs
- Easy export of data files to text or Excel format
- Free download
- Multi-language support (English/Spanish/French/German/Polish/Portuguese/Japanese/Korean/Simplified Chinese/Traditional Chinese)

HOBOware® Pro Version:

Upgrade to HOBOware® Pro for intuitive, powerful software tools that further enhance your data logging—from set-up to analysis.

- Time-saving tools for fast setup & readout
- Advanced plotting tools for more precise data analysis
- Access to Data Assistants for post-processing data

System Requirements:

- HOBOware is not certified to run on Enterprise versions of any version of Windows and is not certified to run on Server versions of Windows. It is certified to run on Windows 10 (Home, Pro), Windows 11 (Home, Pro).
- HOBOware is certified to run on macOS Versions 10.15 (Catalina), 11.0 (Big Sur), 12.0 (Monterey).
- HOBOware no longer needs a Java Runtime Environment on your computer. We include the JRE in HOBOware itself.

