

Digital Oscilloscope





- Analog channel bandwidth: 100 MHz, 70 MHz, 50 MHz
- 4 analog channels, 16 digital channels (for MSO1000Z and MSO upgradable for DS1000Z Plus)
- Real-time sample rate up to 1 GSa/s
- Memory depth up to 12 Mpts (standard)/24 Mpts (optional)
- Up to 30,000 wfms/s waveform capture rate
- Up to 60,000 frames hardware real-time waveform recording and playback functions (optional)
- Innovative "UltraVision" technology
- MSO field upgradable with MSO1000Z upgrade package (MSO upgrade option, only for DS1000Z Plus)
- Various trigger and bus decoding functions
- Low noise floor, vertical scale range: 1 mV/div to 10 V/div
- Built-in dual-channel 25 MHz function/arbitrary waveform generator (only for digital oscilloscope with source channels)
- Various interfaces: USB Host&Device, LAN (LXI), AUX, USB-GPIB (optional)
- Compact size, light weight, easy to use
- 7 inch WVGA (800x480) TFT LCD, intensity graded color display


MSO/DS1000Z series is a high-performance and economic digital oscilloscope designed for the designing, debugging and educational requirements of the mainstream digital oscilloscope market. Wherein, the mixed signal digital oscilloscope aimed at the embedded design and test fields is equipped with 16 digital channels and allows users to measure analog and digital signals at the same time.



Digital Oscilloscope

MSO/DS1000Z Series Digital Oscilloscope

7 inch WVGA (800X480) TFT display, intensity graded color display

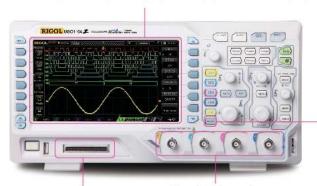

16 digital channels (for MSO1000Z and MSO upgradable for DS1000Z Plus)

4 analog channels





Built-in source control key (digital oscilloscope with source channels)

Product Dimensions: Width \times Height \times Depth=313.1 mm \times 160.8 mm \times 122.4 mm Weight: 3.2 kg \pm 0.2 kg(Without Package)

Innovative UltraVision Technology(Analog Channel)



- · Deeper Memory Depth (standard 12 Mpts, optional 24 Mpts)
- Higher Waveform Capture Rate (up to 30,000 wfms/s)
- Real-time Waveform Recording&Playback (up to 60,000 frames, optional)
- Intensity Graded Color Display

Models and Key Specifications


Model	DS1054Z	DS1074Z Plus	DS1074Z-S Plus	DS1104Z Plus	DS1104Z-S Plus
Wodel	DS 1054Z	MSO1074Z	MSO1074Z-S	MSO1104Z	MSO1104Z-S
Analog BW	50 MHz	70	MHz	100MHz	
Number of Analog Channels	4				
Number of Digital Channels	None 16 digital channels for MSO1000Z; MSO upgradable for DS1000Z Plus				
Max. Sample Rate	Analog channel: 1 GSa/s (single-channel), 500 MSa/s (dual-channel), 250 MSa/s (three/four-channel) Digital channel: 1 GSa/s (8-channel), 500 MSa/s (16-channel)				
Max. Memory Depth	Analog channel: standard 12 Mpts (single-channel), 6 Mpts (dual-channel), 3 Mpts (3/4-channel); optional 24 Mpts (single-channel), 12 Mpts (dual-channel), 6 Mpts (3/4-channel) Digital channel: standard 12 Mpts (8-channel), 6 Mpts (16-channel); optional 24 Mpts (8-channel), 12 Mpts (16-channel)				
Max. Waveform Capture Rate	30,000 wfms/s				
Hardware Real-time Waveform Recording, Playback and Analysis Functions	Up to 60,000 frames (optional)				
Standard Probes	RP2200 150 MHz Passive HighZ Probe: 4 sets; 1 set RPL1116 LA Probe for MSO1000Z				
Built-in Dual-channel 25 MHz Source		No	Yes	No	Yes




Digital Oscilloscope

Features and Benefits

4 analog channels, 16 digital channels (for MSO1000Z and MSO upgradable for DS1000Z Plus)

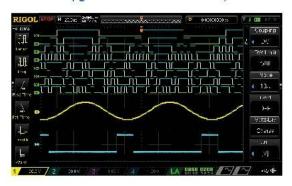


UltraVision: up to 30,000 wfms/s waveform capture rate

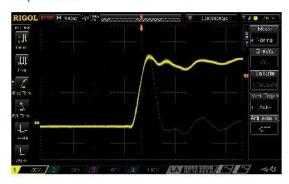

UltraVision: waveform recording and playback functions (optional)




Built-in dual-channel 25 MHz source (MSO1XX4Z-S and DS1XX4Z-S Plus)

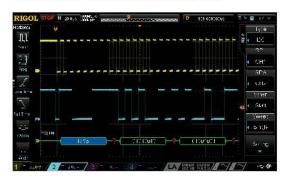


UltraVision: deeper memory (standard 12 Mpts, optional 24 Mpts)




UltraVision: intensity graded color display

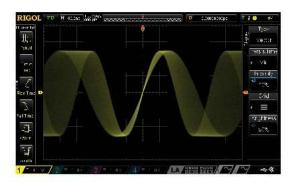

A variety of trigger functions

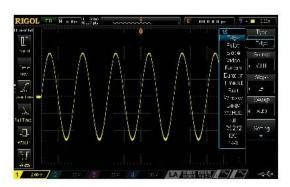


Optional serial bus trigger and decoding functions (RS232/UART, I2C, SPI)

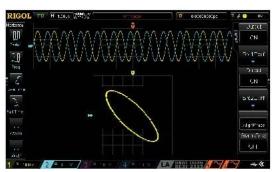

*Do not include the 50 MHz bandwidth model

Digital Oscilloscope

Mixed Signal Digital Oscilloscope

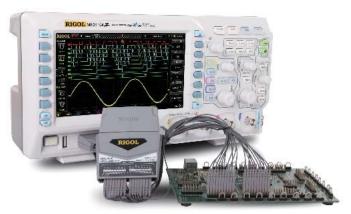

*Do not include the 50 MHz bandwidth model

The mixed signal digital oscilloscope also provides the following functions:

- 16 digital channels for MSO1000Z and MSO upgradable for DS1000Z Plus
- · Sample rate of digital channel up to 1 GSa/s
- · Memory depth of digital channel up to 24 Mpts
- · Waveform capture rate of digital channel up to 30,000 wfms/s
- Hardware real-time waveform recording and playback functions, up to 60,000 frames can be recorded
- Trigger and decoding of the analog and digital channels at the same time
- · Easy grouping and group operation of the digital channels
- · Supports a variety of logic levels
- · Trigger across the analog and digital channels
- Time correlated display and analysis for both the analog and digital channel waveforms

Innovative UltraVision technology (digital channel)



- · Deeper memory depth (up to 24 Mpts)
- Higher waveform capture rate (up to 30,000 wfms/s)
- Real-time waveform recording, playback and analysis functions (up to 60,000 frames)
- Intensity graded color display

Mixed signal analysis with analog and digital channels



Same memory depth for the digital channels, serial bus trigger and decoding on digital channels



Easy to be grouped and labeled for digital channels



Supports a variety of logic levels





Digital Oscilloscope

RIGOL Probes and Accessories Supported by MSO/DS1000Z Series

► RIGOL Passive Probes		► RIGOL Active & Current Probes				
Model Number	Model Number Type Description		Model Number Type		Description	
RP2200	High Z Probe	1X: DC to 7 MHz 10X: DC to 150 MHz Compatibility: all RIGOL scopes.	RP1001C	Current Probe	BW: DC to 300 kHz Max. Input DC: ±100 A, AC P-P: 200 A, AC RMS: 70 A Compatibility: all RIGOL scopes.	
	High Z Probe	10X: DC to 350 MHz Compatibility: all RIGOL scopes.	RP1002C	Current Probe	BW: DC to 1 MHz Max. input DC: ±70 A, AC P-P: 140 A, AC RMS: 50 A Compatibility: all RIGOL scopes.	
RP3300A	High Z Probe	DC to 500 MHz Compatibility: all RIGOL scopes.	RP1003C	Current Probe	BW: DC to 50 MHz Max. input AC P-P: 50 A (Noncontinuous) AC RMS: 30 A Compatibility: all RIGOL scopes. Must order RP1000P power supply.	
RP3500A	High CAT I 2 Voltage CAT II	DC to 300 MHz CAT I 2000 V (DC+AC), CAT II 1500 V (DC+AC) Compatibility: all RIGOL	RP1004C	Current Probe	BW: DC to 100 MHz Max. input AC P-P: 50 A (Noncontinuous) AC RMS: 30 A, Compatibility: all RIGOL scopes. Must order RP1000P power supply.	
RP1300H	Probe	DC to 40 MHz DC: 0 to 10 kV DC,	RP1005C	Current Probe	BW: DC to 10 MHz, Max. input AC P-P: 300 A (Noncontinuous), 500 A (@pulse width ≤30 us), AC RMS: 150 A Compatibility: all RIGOL scopes. Must order RP1000P power supply.	
RP1010H	High Voltage Probe	AC: pulse ≤20 kVp-p, AC: sine wave ≤7 kVrms Compatibility: all RIGOL scopes.	PIGOL CARROLLER	Power Supply	Power supply for RP1003C, RP1004C, RP1005C, support 4 channels.	
RP1018H	High Voltage Probe	DC to 150 MHz DC+AC Peak: 18 kV CAT II AC RMS: 12 kV CAT II Compatibility: all RIGOL scopes.	RP1000P	High Voltage Differential Probe	BW: 25 MHz Max. Voltage ≤1400 Vpp Compatibility: all RIGOL scopes.	
RPL1116	Logic Analysis Probe	Logic analysis probe (for mixed signal digital oscilloscope)	RP1050D	High Voltage Differential Probe	BW: 50 MHz Max. Voltage ≤7000 Vpp Compatibility: all RIGOL scopes.	
WA SO	Adapter	50 Ω impedance adapter (2 W, 1 GHz)	647	High Voltage Differential Probe	BW: 100 MHz Max. Voltage ≤7000 Vpp Compatibility: all RIGOL scopes.	

RP1100D

RT50J



Digital Oscilloscope

Specifications

All the specifications are guaranteed except parameters marked with "Typical" and the oscilloscope needs to operate for more than 30 minutes under the specified operation temperature.

Sample

Sample Mode	Real-time sample		
Real-time Sample Rate	Analog channel: 1 GSa/s (single-channel), 500 MSa/s (dual-channel), 250 MSa/s (three/four-channel) Digital channel: 1 GSa/s (8-channel), 500 MSa/s (16-channel)		
Peak Detect	Analog channel: 4 ns Digital channel: 4 ns		
Averaging	After all the channels finish N samples at the same time, N can be 2, 4, 8, 16, 32, 64, 128, 256, 512 or 102		
High Resolution	12 bit (max)		
Interpolation	Sin(x)/x (optional)		
Min Detect Pulse Width	Digital channel: 10 ns		
Memory Depth	Analog channel: standard 12 Mpts (single-channel), 6 Mpts (dual-channel), 3 Mpts (three/four-channel); optional 24 Mpts (single-channel), 12 Mpts (dual-channel), 6 Mpts (three/four-channel) Digital channel: standard 12 Mpts (8-channel), 6 Mpts (16-channel); optional 24 Mpts (8-channel), 12 Mpts (16-channel)		

Input

Number of Channels	MSO1XX4Z/1XX4Z-S: 4 analog channels, 16 digital channels DS1XX4Z Plus/1XX4Z-S Plus: 4 analog channels, MSO upgradable DS1054Z: 4 analog channels
Input Coupling	DC, AC or GND
Input Impedance	Analog channel: $(1 \text{ M}\Omega\pm1\%) \parallel (15 \text{ pF}\pm3 \text{ pF})$ Digital channel: $(100 \text{ k}\Omega\pm1\%) \parallel 8 \text{ pF}\pm3 \text{ pF})$
Probe Attenuation Coefficient	Analog channel: 0.01X to 1000X, in 1-2-5 step
Max Input Voltage (1MΩ)	Analog channel: CAT I 300 Vrms, CAT II 100 Vrms, transient overvoltage 1000 Vpk With RP2200 10:1 probe: CAT II 300 Vrms Digital channel: CAT I 40 Vrms, transient overvoltage 800 Vpk

Horizontal

Timebase Scale	5 ns/div to 50 s/div
Max Record Length	24 Mpts (optional)
Timebase Accuracy ^[1]	≤ ± 25 ppm
Clock Drift	≤ ± 5 ppm/year
Max Delay Range	Negative delay: ≥1/2 screen width Positive delay: 1 s to 500 s
Timebase Mode	YT, XY, Roll
Number of X-Ys	1
Waveform Capture Rate[2]	30,000 wfms/s (dots display)
Zero Offset	±0.5div*minimum time base scale

Vertical

Bandwidth (-3dB)	MSO1104Z/1104Z-S and DS1104Z Plus/1104Z-S Plus: DC to 100 MHz MSO1074Z/1074Z-S and DS1074Z Plus/1074Z-S Plus: DC to 70 MHz DS1054Z: DC to 50 MHz	
------------------	--	--



Digital Oscilloscope

Single-shot Bandwidth	MSO1104Z/1104Z-S and DS1104Z Plus/1104Z-S Plus: DC to 100 MHz MSO1074Z/1074Z-S and DS1074Z Plus/1074Z-S Plus: DC to 70 MHz DS1054Z: DC to 50 MHz	
Vertical Resolution	Analog channel: 8 bits Digital channel: 1 bit	
Vertical Scale (Probe ratio is 1X)	1 mV/div to 10 V/div	
Offset Range (Probe ratio is 1X)	1 mV/div to 499 mV/div: ± 2 V 500 mV/div to 10 V/div: ± 100 V	
Bandwidth Limit ^[1]	20 MHz	
Low Frequency Response (AC coupling, -3dB)	≤5 Hz (on BNC)	
Calculated Rise Time ^[1]	MSO1104Z/1104Z-S and DS1104Z Plus/1104Z-S Plus: 3.5 ns MSO1074Z/1074Z-S and DS1074Z Plus/1074Z-S Plus: 5 ns DS1054Z: 7 ns	
DC Gain Accuracy	<10 mV: ±4% full scale ≥10 mV: ±3% full scale	
DC Offset Accuracy	±0.1 div ± 2 mV ± 1% offset	
Channel to Channel Isolation	DC to maximum bandwidth: >40 dB	

Vertical (Digital Channel)(Applicable to MSO1000Z and DS1000Z Plus with MSO Upgrade Option)

Threshold	Adjustable threshold of 8 channels per group		
Threshold	TTL (1.4 V)		
	5.0 V CMOS (+2.5 V), 3.3 V CMOS (+1.65 V)		
	2.5 V CMOS (+1.25 V), 1.8 V CMOS (+0.9 V)		
	ECL (-1.3 V)		
Selection	PECL (+3.7 V)		
	LVDS (+1.2 V)		
	0 V		
	User		
Threshold Range	±15.0 V, in 10 mV step		
Threshold Accuracy	±(100 mV + 3% of threshold setting)		
Dynamic Range	±10.0 V + threshold		
Min Voltage Swing	500 mVpp		
Vertical Resolution	1 bit		

Trigger

riiggei	
Trigger Level Range	±5 div from the center of the screen
Trigger Mode	Auto, Normal, Single
Holdoff Range	16 ns to 10 s
High Frequency Rejection[1]	75 kHz
Low Frequency Rejection[1]	75 kHz
Trigger Sensitivity ^[1]	1.0 div (below 5 mV or noise rejection is enabled) 0.3 div (above 5 mV and noise rejection is disabled)
Edge Trigger	
Edge Type	Rising, Falling, Rising/Falling
Pulse Trigger	
Pulse Condition	Positive Pulse Width (greater than, lower than, within specified interval) Negative Pulse Width (greater than, lower than, within specified interval)
Pulse Width	8 ns to 10 s
Runt Trigger (Optional)	
Pulse Width Condition	None, >, <, <>
Polarity	Positive, Negative
Pulse Width Range	8 ns to 10 s
Window Trigger (Optional)	
Windows Type	Rising, Falling, Rising/Falling



Digital Oscilloscope

Trigger Position	Enter, Exit, Time	
Windows Time	8 ns to 10 s	
Nth Edge Trigger (Optional)		
Edge Type	Rising, Falling	
Idle Time	16 ns to 10 s	
Edge Number	1 to 65535	
Slope Trigger	110 00000	
Slope Condition	Positive Slope (greater than, lower than, within specified interval)	
	Negative Slope (greater than, lower than, within specified interval)	
Time Setting	8 ns to 10 s	
Video Trigger		
Signal Standard	NTSC, PAL/SECAM, 480P, 576P	
Pattern Trigger		
Pattern Setting	H, L, X, Rising, Falling	
Delay Trigger (Optional)		
Edge Type	Rising, Falling	
Delay Type	>, <, <>, ><	
Delay Time	8 ns to 10 s	
TimeOut Trigger (Optional)		
Edge Type	Rising, Falling, Rising/Falling	
TimeOut Value	16 ns to 10 s	
Duration Trigger		
Pattern	H, L, X	
Trigger Condition	>, <, <>	
Duration Time	8 ns to 10 s	
Setup/Hold Trigger (Optional)	
Edge Type	Rising, Falling	
Data Pattern	H, L,X	
Setup Time	8 ns to 1 s	
Hold Time	8 ns to 1 s	
RS232/UART Trigger (Option	nal)	
Polarity	Normal, Invert	
Trigger Condition	Start, Error, Check Error, Data	
Baud Rate	2400 bps, 4800 bps, 9600 bps, 19200 bps, 38400 bps, 57600 bps, 115200 bps, 230400 bps, 460800 bps, 921600 bps, 1 Mbps and User	
Data Bits	5 bits, 6 bits, 7 bits, 8 bits	
12C Trigger (Optional)	o and, o and, r and, o and	
Trigger Condition	Start, Restart, Stop, Missing Ack, Address, Data, A&D	
Address Bits	7 bits, 8 bits, 10 bits	
Address Range	0 to 127, 0 to 255, 0 to 1023	
Byte Length	1 to 5	
SPI Trigger (Optional)	1.00	
	Timequit CS	
Trigger Condition	Timeout, CS	
Timeout Value	16 ns to 10 s	
Data Bits	4 bit to 32 bit	
Data Line Setting	H, L, X	



Digital Oscilloscope

Measure

Cursor	Manual mode	Voltage deviation between cursors ($\triangle V$) Time deviation between cursors ($\triangle T$) Reciprocal of $\triangle T$ (Hz) (1/ $\triangle T$)	
	Track mode	Voltage and time values of the waveform point	
	Auto mode	Allow to display cursors during auto measurement	
Auto Measurement	Negative Duty Cycl 1→2 f , Phase 1→ Value, Middle Value Variance Digital channel: Period, Frequency,	Rise Time, Fall Time, Positive Pulse Width, Negative Pulse Width, Positive Duty Cycle, le, tVmax, tVmin, Positive Rate, Negative Rate, Delay $1 \rightarrow 2 \frac{1}{5}$, Delay $1 \rightarrow 2 \frac{1}{5}$, Phase $2\frac{1}{5}$, Maximum, Minimum, Peak-Peak Value, Top Value, Bottom Value, Amplitude, Upper e, Lower Value, Average, Vrms, Overshoot, Pre-shoot, Area, Period Area, Period Vrms, Positive Pulse Width, Negative Pulse Width, Positive Duty Cycle, Negative Duty Cycle, $y \rightarrow 2\frac{1}{5}$, Phase $1 \rightarrow 2\frac{1}{5}$, Phase $1 \rightarrow 2\frac{1}{5}$	
Number of Measurements	Display 5 measurements at the same time		
Measurement Range	Screen or cursor		
Measurement Statistic	Average, Max, Min,	Standard Deviation, Number of Measurements	
Counter	Hardware 6 bit coun	ter (channels are selectable)	

Math Operation

Waveform Operation	A+B, A-B, A×B, A/B, FFT, A&&B, A B, A^B, !A, Intg, Diff, Sqrt, Lg, Ln, Exp, Abs	
FFT Window	Rectangle, Hanning, Blackman, Hamming, Flat Top, Triangle	
FFT Display	Half, Full	
FFT Vertical Scale	dB/dBm, Vrms	
Number of Buses for Decoding	2	
Decoding Type	Parallel (standard), RS232/UART (option), I2C (option), SPI (option)	

Display

Display Type	7.0 inch TFT LCD display	
Display Resolution	800 horizontal × RGB × 480 vertical pixel	
Display Color	16 million color (24 bit true color)	
Persistence Time	Min, 100 ms, 200 ms, 500 ms, 1 s, 5 s, 10 s, Infinite	
Display Type	Dots, Vectors	

1/0

Standard Ports	USB Host, USB Device, LAN, Aux Output (TrigOut/PassFail), GPIB (extended via the USB Host interface)
----------------	--

Signal Source ((Applicable to Digital Oscilloscopes with Source Channels))

Number of Channels	2		
Sample Rate	200 MSa/s		
Vertical Resolution	14 bits		
Max. Frequency	25 MHz		
Standard Waveform	Sine, Square, Pulse, Ramp, Noise, DC		
Arbitrary Waveform	Since, Exp.Rise, EXP.Fall, ECG, Gauss, Lorentz, Haversine		
Sine	Frequency Range	0.1 Hz to 25 MHz	
	Flatness	±0.5 dB (relative to 1 kHz)	
	Harmonic Distortion	-40 dBc	
	Stray (Non-harmonic)	-40 dBc	
	Total Harmonic Distortion	1%	
	S/N Ratio	40 dB	



Digital Oscilloscope

Square /Pulse	Frequency Range	Square: 0.1 Hz to 15 MHz Pulse: 0.1 Hz to 1 MHz	
	Rise/Fall time	<15 ns	
	Overshoot	<5%	
	Duty Cycle	Square: always be 50% Pulse: 10% to 90% adjustable	
	Duty Cycle Resolution	1% or 10 ns (the larger of the two)	
	Min. Pulse Width	20 ns	
	Pulse Width Resolution	10 ns or 5 bits (the larger of the two)	
	Jitter	500 ps	
Ramp	Frequency Range	0.1 Hz to 100 kHz	
	Linearity	1%	
	Symmetry	0 to 100%	
Noise ^[1]	Bandwidth	25 MHz	
Built-in Waveform	Frequency Range	0.1 Hz to 1 MHz	
A - L - 2 1 A	Frequency Range	0.1 Hz to 10 MHz	
Arbitrary Waveform	Waveform Length	2 to 16k pts	
Frequency	Accuracy	100 ppm (lower than 10 kHz) 50 ppm (greater than 10 kHz)	
	Resolution	0.1 Hz or 4 bit, the larger of the two	
Amplitude	Output Range	20 mVpp to 5 Vpp, High-resistance 10 mVpp to 2.5 Vpp, 50 Ω	
	Resolution	100 μV or 3 bit, the greater of the two	
	Accuracy	2% (1 kHz)	
DC Offset	Range	±2.5 V, HighZ ±1.25 V, 50 Ω	
	Resolution	100 μV or 3 bit, the larger of the two	
	Accuracy	2% (1 kHz)	
Modulation	AM, FM		

General Specifications

Probe Compensation Out	put		
Output Voltage[1]	About 3 V, peak-peak		
Frequency ^[1]	1 kHz		
Power			
Power Voltage	100 V to 240 V, 45 Hz to	0 440 Hz	
Power	Maximum 50 W		
Fuse	2 A, T degree, 250 V		
Environment			
Temperature Range	Operating: 0°C to +50°C		
	Non-operating: -40°C to +70°C		
Cooling Method	Fan cooled		
Humidity Range	0°C to +30°C : ≤95°C relative humidity		
	+35°C to +40°C : ≤75°C relative humidity		
	+40°C to +50°C : ≤45°C relative humidity		
Altitude	Operating: under 3,000 meters		
	Non-operating: under 15,000 meters		
Mechanical	1		
Dimensions ^[3]	Width × Height × Depth = 313.1 mm × 160.8 mm × 122.4 mm		
Weight ^[4]	Without package	$3.2 \text{ kg} \pm 0.2 \text{ kg}$	
	With package	$3.8 \text{ kg} \pm 0.5 \text{ kg}$	



Digital Oscilloscope

Calibration Interval	
The recommended calibration	interval is one year.
Regulation Standards	
Electromagnetic Compatibility	2004/108/EC Execution standard EN 61326-1:2006 EN 61326-2-1:2006
Safety	UL 61010-1:2004; CAN/CSA-C22.2 NO. 61010-1-2004; EN 61010-1:2001; IEC 61010-1:2001

$$\label{eq:Note_state} \begin{split} &\text{Note}^{[1]}. \text{Typical.} \\ &\text{Note}^{[2]}. \text{Maximum value. 50 ns, single-channel mode, dots display, auto memory depth.} \\ &\text{Note}^{[3]}. \text{Supporting legs and handle folded, knob height included.} \\ &\text{Note}^{[4]}. \text{Standard configuration.} \end{split}$$

Ordering Information

	Description	Order Number
	DS1104Z Plus (100 MHz, 4 analog channels, MSO ready)	DS1104Z Plus
	DS1104Z-S Plus (100 MHz, 4 analog channels, 2-channel 25 MHz signal source, MSO ready)	DS1104Z-S Plus
	DS1074Z Plus (70 MHz, 4 analog channels, MSO ready)	DS1074Z Plus
	DS1074Z-S Plus (70 MHz, 4 analog channels, 2-channel 25 MHz signal source, MSO ready)	DS1074Z-S Plus
Models	MSO1104Z (100 MHz, 4 analog channels, 16 digital channels)	MSO1104Z
	MSO1104Z-S (100 MHz, 4 analog channels, 16 digital channels, 2-channel 25 MHz signal source)	MSO1104Z-S
	MSO1074Z (70 MHz, 4 analog channels, 16 digital channels)	MSO1074Z
	MSO1074Z-S (70 MHz, 4 analog channels, 16 digital channels, 2-channel 25 MHz signal source)	MSO1074Z-S
	DS1054Z (50 MHz, 4 analog channels)	DS1054Z
	Power Cord conforming to the standard of the country	2
	USB Cable	CB-USBA-USBB- FF-150
Standard Accessories	4 Passive Probes (150 MHz)	RP2200
	1 Logic Analyzer Probe (only for MSO1000Z)	RPL1116
	Quick Guide	2
	Resource CD (include User's Guide and application software)	8
MSO Upgrade Option	MSO upgrade package for DS1000Z Plus only, including logic analyzer probe (RPL1116) and model label	MSO1000Z Upgrade Package
Optional Accessory	Rack Mount Kit	RM-DS1000Z
Memory Depth Option	Analog channel: 24 Mpts (single channel)/12 Mpts (dual-channel)/6 Mpts (three/four channel) Digital channel: 24 Mpts (8-channel)/12 Mpts (16-channel)	MEM-DS1000Z
Waveform Record Option	This option provides the waveform recording and playback function.	REC-DS1000Z
Advanced Trigger Option	RS232/UART trigger, I2C trigger, SPI trigger, Runt trigger, Window trigger, Nth edge trigger, delay trigger, timeout trigger, Setup/Hold trigger	AT-DS1000Z
Serial Protocol Analysis Option	RS232/UART, I2C and SPI trigger and decoding functions	SA-DS1000Z